

SCHEDULE OF INSPECTION AND MAINTENANCE SERVICES

MAINTENANCE ITEM		MAINTENANCE INTERVAL (Number of months or km (miles), whichever occurs first)										REMARKS	
		Months	3	7.5	15	22.5	30	37.5	45	52.5	60		
		x1,000 km	4.8	12	24	36	48	60	72	84	96		
		x1,000 miles	3	7.5	15	22.5	30	37.5	45	52.5	60		
1	Drive belt(s) [Except camshaft] (Inspect drive belt tension)						I					R	
2	Timing belt (Camshaft drive belt)						I*					R	
3	Engine oil		R	R	R	R	R	R	R	R	R	R	See NOTE 1)
4	Engine oil filter		R	R	R	R	R	R	R	R	R	R	
5	Replace engine coolant and inspect cooling system, hoses and connections						P					P	
6	Replace fuel filter and inspect fuel system hoses and connections						(P)					P	See NOTE 2), 6) & 7)
7	Air filter elements						R					R	
8	Spark plug											R	
9	Differential (Front & Rear) Lubricants (Gear oil)						I						See NOTE 3)
10	Automatic transmission fluid						I						See NOTE 4)
11	Brake fluid						R					R	See NOTE 5)
12	Disc brake pad and disc, Front and rear axle boots and axle shaft joints				I		I		I			I	See NOTE 6)
13	Brake linings and drums (Parking brake)						I					I	See NOTE 6)
14	Inspect brake line and check operation of parking and service brake system				P		P		P			P	See NOTE 6)
15	Steering and suspension				I		I		I			I	See NOTE 6)
16	Front and rear wheel bearing lubricant											(I)	
17	Supplemental restraint system	Inspect every 10 years.											

1) When the vehicle is used under severe driving conditions such as those mentioned below**, the engine oil should be changed more often.

2) When the vehicle is used in extremely cold or hot weather areas, contamination of the filter may occur and filter replacement should be performed more often.

3) When the vehicle is frequently operated under severe conditions, replacement should be performed every 48,000 km (30,000 miles).

4) When the vehicle is frequently operated under severe conditions, replacement should be performed every 24,000 km (15,000 miles).

5) When the vehicle is used in high humidity areas or in mountainous areas, change the brake fluid every 24,000 km (15,000 miles) or 15 months, whichever occurs first.

6) When the vehicle is used under severe driving conditions such as those mentioned below**, inspection should be performed every 12,000 km (7,500 miles) or 7.5 months, whichever occurs first.

7) This inspection is not required to maintain emission warranty eligibility and it does not affect the manufacturer's obligations under EPA's in-use compliance program.

**** Examples of severe driving conditions:**

- (1) Repeated short distance driving. (item 3, 12 and 13 only)
- (2) Driving on rough and/or muddy roads. (Item 12, 13 and 15 only)

(3) Driving in dusty conditions.

(4) Driving in extremely cold weather. (Item 3 and 15 only)

(5) Driving in areas where roads salts or other corrosive materials are used. (Item 6, 12, 13, 14 and 15 only)

(6) Living in coastal areas. (Item 6, 12, 13, 14 and 15 only)