

Check Engine Code Instructions

Directions for checking the Codes

- 1) Remove the kick panel just beside the left foot rest on the driver's side.
- 2) Locate blue wires.
- 3) Locate black connector. Hold it notch up.
- 4) With ignition off, insert one of the wires into top row, 2nd pin from left.
- 5) Turn key to on position, but do not start the car.
- 6) Watch blinky check engine light on dashboard. Count blinks. Long blinks = 10, Short blinks = 1.
- 7) Keep watching blinky light until you get mesmerized.

To clear codes (after problem has been resolved):

- 1) With engine off, stick the blue wires to 1st and 2nd pin in the top row counting from left on the black connector, with notch facing up.
- 2) Start car. Shut off car. Remove pins.
- 3) Read codes to make sure they are clear. No codes = steady blinks at 1/4 second intervals.

CODE PROBABLE CAUSE

- 11 Crank Angle Sensor or Circuit
- 12 Starter Switch or Circuit
- 13 Cam Position Sensor or Circuit (TDC Sensor on Justy)
- 14 Fuel Injector No. 1 (Legacy, Impreza, Justy, SVX)
- 14 Fuel Injector No. 1 and 2 (XT, Loyale, GL, DL)
- 15 Fuel Injector No. 2 (Legacy, Impreza, Justy, SVX)
- 15 Fuel Injector No. 3 and 4 (Loyale, GL, DL)
- 15 Fuel Injector No. 5 and 6 (XT-6)
- 16 Fuel Injector No. 3 (Legacy, Impreza, Justy, SVX)
- 16 Fuel Injector No. 3 and 4 (XT)
- 17 Fuel Injector No. 4 (Legacy, Impreza, SVX)
- 17 Fuel injector No. 1 and 2 (XT-6)
- 18 Fuel Injector No. 5 (SVX)
- 19 Fuel Injector No. 6 (SVX)
- 21 Coolant Temperature Sensor or Circuit
- 22 Knock Sensor or Circuit (Right Side on SVX)
- 23 Air Flow Meter or Circuit (Exc. Justy)
- 23 Pressure Sensor (Justy)
- 24 Air Control Valve or Circuit (Exc. Justy)
- 24 Idle Speed Control Solenoid Valve (Justy)
- 25 Fuel injector No. 3 and 4 (XT-6)
- 26 Air Temperature Sensor (Justy)
- 28 Knock Sensor No. 2 (SVX, Left Side)
- 29 Crank Angle Sensor (SVX, No. 2)
- 31 Throttle Position Sensor or Circuit
- 32 Oxygen Sensor or Circuit (No. 1, Right Side, On SVX)
- 33 Vehicle Speed Sensor (VSS) or Circuit
- 34 EGR Solenoid or Circuit
- 35 Purge Control Solenoid or Circuit
- 36 Air Suction Solenoid Valve (Impreza)
- 36 Ignitor Circuit (Justy)
- 37 Oxygen Sensor (No. 2, Left Side, On SVX)
- 38 Engine Torque Control (SVX)
- 41 Air/Fuel Adaptive Control
- 42 Idle Switch or Circuit
- 43 Throttle Switch (Justy)
- 44 Wastegate Duty Solenoid (Turbo Models)
- 45 Pressure Sensor Duty Solenoid (Turbo Models)
- 45 Atmospheric Pressure Sensor or Circuit (Non- Turbo Models) 49 Airflow Sensor

CODE PROBABLE CAUSE Continued:

- 51 Neutral Switch (Manual Transmission Models)
- 51 Inhibitor Switch (Automatic Transmission Models)
- 52 Parking Brake Switch (Exc. Justy)
- 52 Clutch Switch (Justy)
- 55 EGR Temperature Sensor or Circuit
- 56 EGR System
- 61 Parking Brake Switch (Loyale)
- 61 Fuel Tank Pressure Control Solenoid (Impreza)
- 62 Fuel Temperature Sensor (Impreza)
- 62 Electric Load Signal (Justy)
- 63 Fuel Tank Pressure Sensor (Impreza)
- 63 Blower Fan Switch (Justy)
- 65 Vacuum Pressure Sensor

To perform the TCU self diag test for EXISTING problems

- 1) Warm up engine by driving at speeds greater than 12mph.
- 2) Stop vehicle and turn ignition switch OFF.
- 3) Turn ignition switch ON and make sure POWER indicator lamp comes on.
- 4) Turn ignition switch OFF.
- 5) Move selector lever to D and turn manual switch ON.
- 6) Turn ignition switch ON.
- 7) Move selector lever to "3" and turn manual switch OFF.
- 8) Move selector level to "2" and turn manual switch ON.
- 9) Move selector lever to "1" and turn manual switch OFF.
- 10) Partially depress accelerator pedal (to turn idle switch off).
- 11) Check code as displayed on POWER light. Blinking once every 1/4sec is normal.

To perform the TCU self diag test for PREVIOUS problems

- 1) Warm up engine by driving at speeds greater than 12mph.
- 2) Stop vehicle and turn ignition switch OFF.
- 3) Turn ignition switch ON and make sure POWER indicator lamp comes on.
- 4) Turn ignition switch OFF.
- 5) Move selector lever to "1" and turn manual switch ON.
- 6) Turn ignition switch ON.
- 7) Move selector lever to "2" and turn manual switch OFF.
- 8) Move selector lever to "3" and turn manual switch ON.
- 9) Move selector lever to "D" and trun manual switch OFF.
- 10) Partially depress accelerator pedal (to turn idle switch off).
- 11) Check code as displayed on POWER light. Blinking once every 1/4sec is normal.

Trouble codes:

- 11. Duty solenoid A
- 12. Duty solenoid B
- 13. Shift solenoid 3
- 14. Shift solenoid 2
- 15. Shift solenoid 1
- 21. ATF temp sensor
- 22. Atmospheric sensor
- 23. Engine revolution signal
- 24. Duty solenoid C
- 25. Engine torque control signal
- 31. Throttle sensor
- 32. Vehicle speed sensor 1
- 33. Vehicle speed sensor 2