

Oxygen Sensor Replacement

Author: Dannmarr

Before you start, disconnect the battery.


1. Place a chuck behind the rear wheels.



2. Jack the front of the car. I used a garage jack and jack stands. Make sure you know the locations of the jack points before you work under a car.



3. Disconnect the wires on the sensors (this can be done from underneath or above) a mirror can also be helpful.

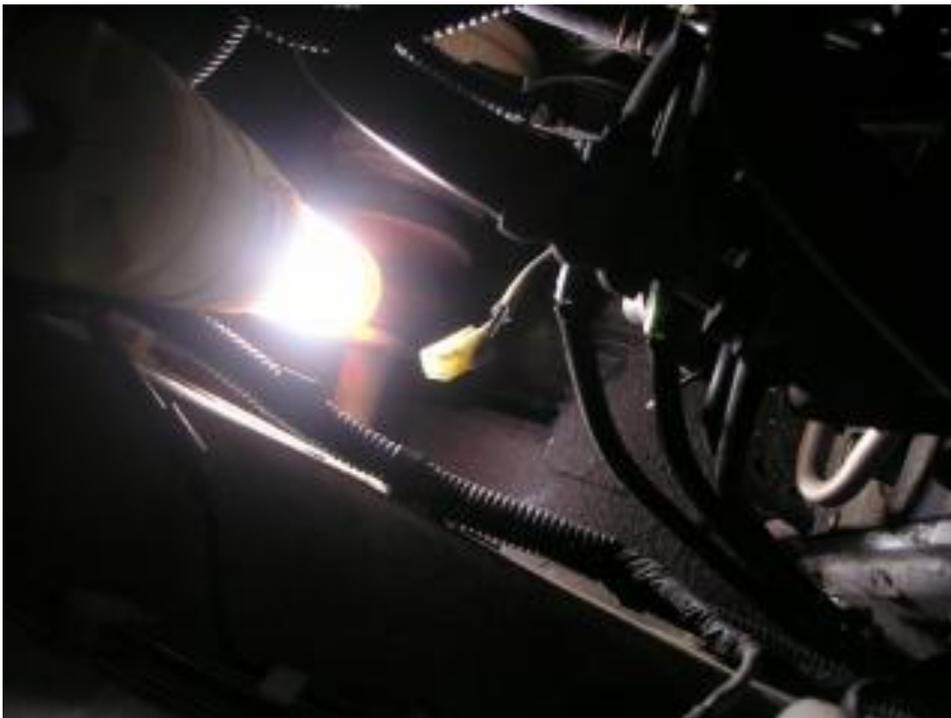

4. Spray the threads of the oxygen sensors with WD-40.



5. Use a box wrench, open end wrench or a special socket for Oxygen sensors (I used the special socket with a 1 inch box wrench).



6. Remove the sensors.



The new sensor is on bottom and old one is top one.



7. Apply lube to the threads of the new sensors before installing.



8. Reconnect the wires.

You're done!