



FUSE BOX A

ONLY USE FUSE OF SPECIFIED RATING. (FUSE PULLER IS IN INTERIOR FUSEBOX.)

RELAY HEAD RH

RELAY HEAD LH

25A FAN LH

25A FAN RH

15A HEAD RH

10A CLOCK

15A HEAD LH

20A LIGHT SW

15A HAZARD

RELAY 4 FAN RH1

RELAY 3 FAN LH2

RELAY 2 FAN LH1

RELAY 1 FAN GND

45A SBF 5

45A SBF 4

45A SBF 3

1.5 (GRAY) FUSIBLE LINK

45A SBF (ABS)

10A SPARE

15A SPARE

25A SPARE

30A SBF 2

30A SBF 1

RELAY 5 FAN RH2

RELAY 6 (SEAT HEATER)

RELAY 7 A/C COMP

RELAY 8 HEAD

10A (FWD)

10A A / C