

DOOR LOCKS & TRUNK RELEASE - POWER

1996 Subaru SVX

1995-96 ACCESSORIES & EQUIPMENT
Subaru Power Door Locks & Trunk Release

SVX

DESCRIPTION & OPERATION

Power door locks may be operated either from inside or outside of vehicle. From outside, doors and rear gate lock when driver's door is locked and unlock when it is unlocked with a key. From inside, all doors and rear gate lock when lock lever of driver's door is locked and unlock when lever is unlocked. Door is locked when end of lock lever is pressed down and unlocked when lock lever is pulled up. Individual doors can be unlocked and opened by moving its own lock lever to unlock position. Doors can be locked from outside without a key. To lock a front door, press lock lever down and close door while lifting up on handle. To lock a rear door, press lock lever down and shut door without pulling up on handle.

TROUBLE SHOOTING

Information is not available from manufacturer.

TESTING

See appropriate wiring diagram to diagnose circuits.

REMOVAL & INSTALLATION

Information is not available from manufacturer.

WIRING DIAGRAMS

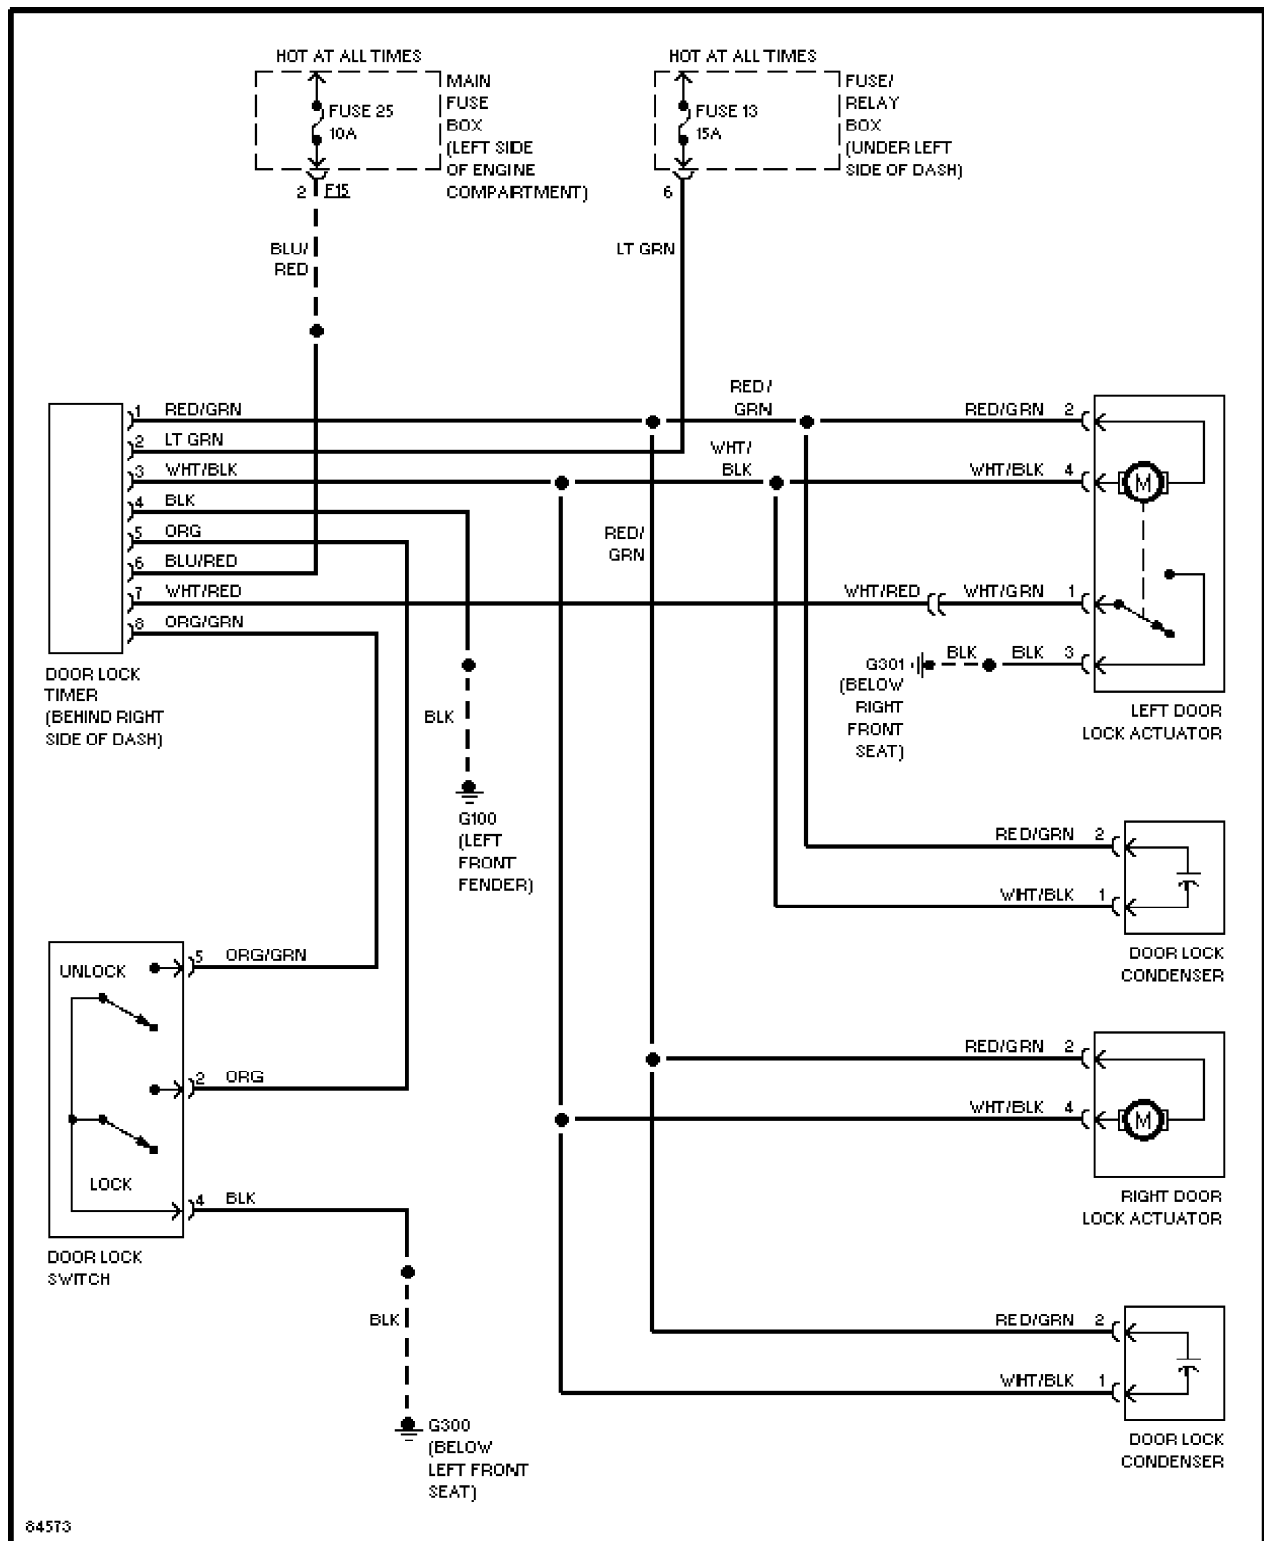


Fig. 1: Power Door Lock System Wiring Diagram (1995-96)