

Replacing the Fuel Filter

Before replacing the fuel filter, you need to disconnect the power to the fuel pump to relieve the pressure in the line. To do this, disconnect the wiring to the fuel pump, which is under the passenger side of the back seat. The connector is circled in the picture below.

