

# Fixing The Window Sleeve Lock Regulator

Part needed: 62101PA081 - Sleeve-Lock Regulator

Tools required: One medium Phillips and one small flat screwdriver.

1. Remove the two screws under the felt in the armrest.
2. Remove plastic panel under door handle (this is what I used the small flat screwdriver for).
3. Remove the screw under the plastic panel you just took off.
4. Remove the two screws at front edge of door.
5. Grasp door panel at bottom and pull away.
6. Lift door panel off the door, be careful not to "yank" away as the courtesy light and power windows need to be disconnected first. **Do not remove it yet!** You need to use the window control to move the wire to the proper position.



7. Pull back clear plastic enough to see in big hole in metal door (you may have to remove the armrest support – and two more screws).



8. If the window and the wire (wire looks like a bicycle cable) is not somewhere around half up/down, press window switch to get the wire in the right place. You can tell when there's a little rectangular metal part - that looks like it's joining the wire - positioned so it's in the middle of the opening that the sleeve lock regulator will be installed. The one below is not quite high enough yet.






The T hole is where the sleeve lock regulator will be installed. The metal piece is now in the middle of the T hole (where it belongs) in the picture below.




9. Disconnect door wiring at connectors and move door panel to someplace safe.

10. Get the clip ready to be put into the T Hole.

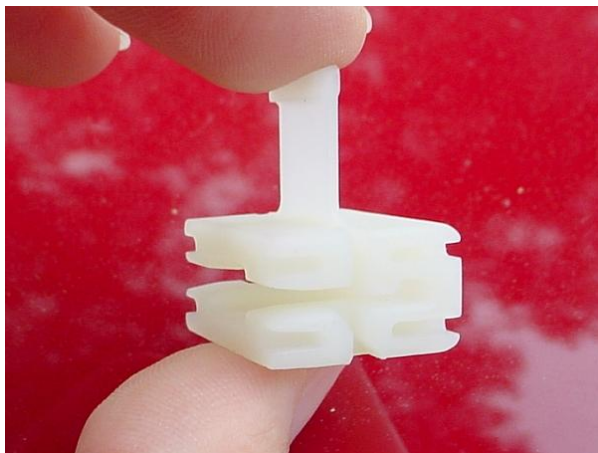

11. Position new clip (actually called a sleeve-lock regulator) over the metal rectangle riding on the wire. Position the clip so the opening of the clip is facing into door - the metal part fits in the clip - really only one way. Push clip in far enough so the slits in it can move into the legs of the T-shape hole in the lower window frame. Slide clip down leg of the T until the thin tab on the clip snaps into place on the big side of the T. (This will be pretty obvious once it is in the door).

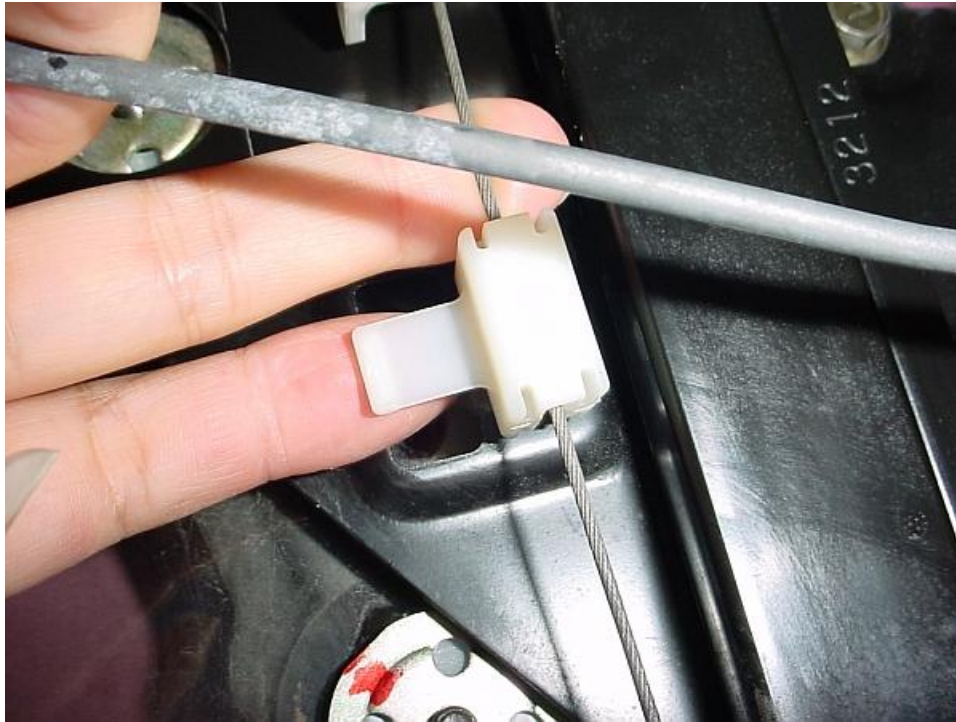

It's done!



12. Put it all back together in reverse order.