

Fig. 168

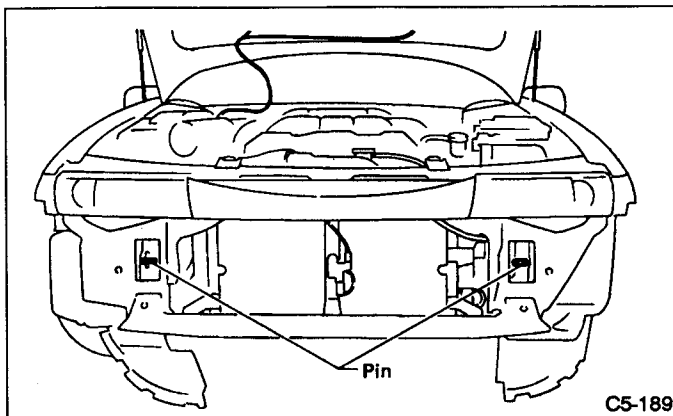


Fig. 170

11) Remove bumper ASSY.

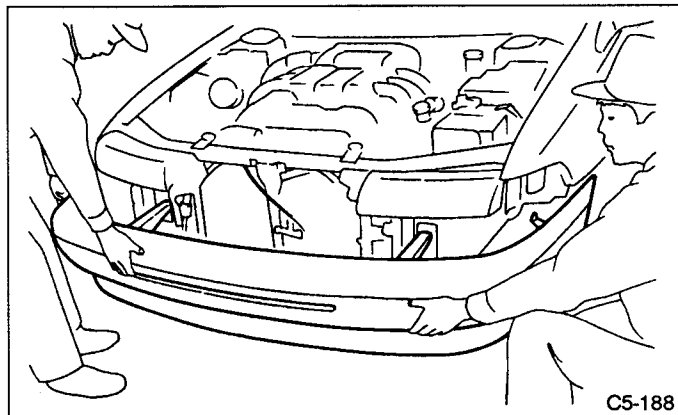


Fig. 169

B: INSTALLATION


To install the front bumper, reverse the above removal procedures.

- a. Be extremely careful to prevent scratches on bumper face as it is made of resin.
- b. Be careful not to scratch the body when removing or installing the bumper.
- c. Pins are provided on body side to facilitate installation of front bumper.

6. Rear Bumper

A: REMOVAL


- 1) Lift up the car.
Please balance weights, etc in the trunk compartment.
- 2) Remove rear side of mud guard.

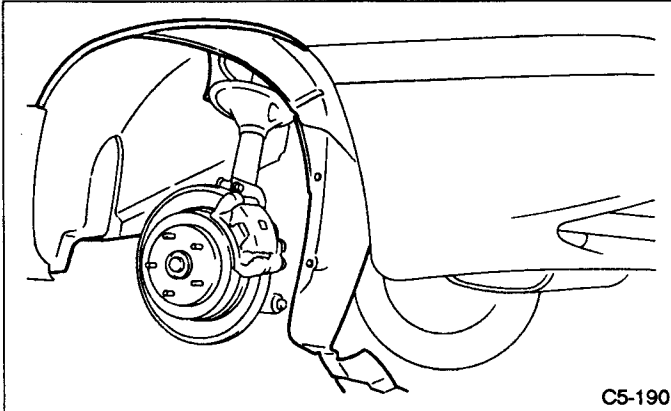

C5-190

Fig. 171


- 3) Remove bolt from side of bumper.

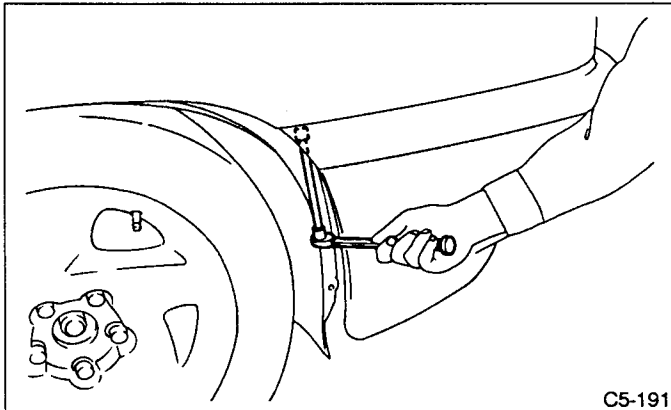

C5-191

Fig. 172


- 4) Remove bracket (side LWR) from car body.

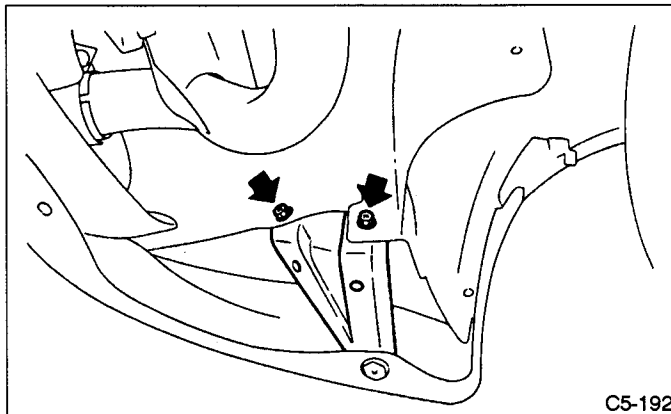

C5-192

Fig. 173


- 5) Remove trim panel (trunk rear), and detach rear side of trunk trim (side).

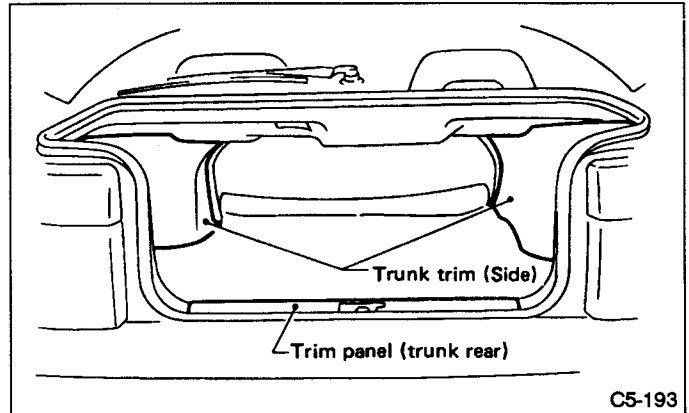

C5-193

Fig. 174


- 6) Remove rear wiper washer tank (right side only).
- 7) Remove nut from side of bumper.

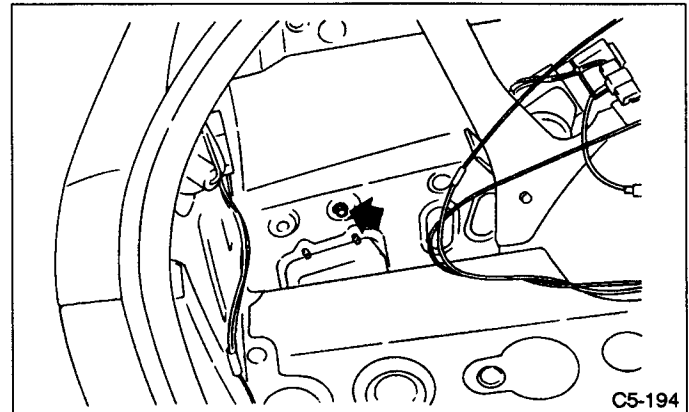

C5-194

Fig. 175

- 8) Detach cap and remove bolts from bumper stays.

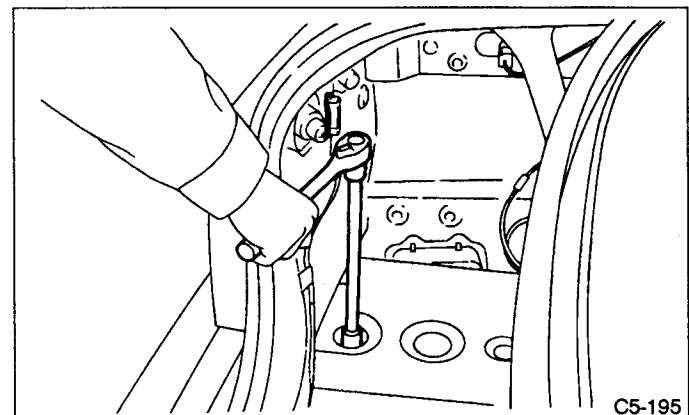

C5-195

Fig. 176